### by ED in FL & Dicktator

#### URGENT ATTENTION!!! FOUND BY ED in FL!

Bed light on ALL SSR's is subject to BURN catch FIRE!!

Yes, Bed light OVER fused!

Bed light bulb is 3 amp.

Fuse 03/04 is 15 AMP! Fuse 05/06 is 10 AMP!



**ED** in FL & Dicktator

Check connector on bed to see if it shows signs of damage.

PC board with relay.



**ED** in FL & Dicktator

Three wires go into Bed Cover connector.


One for power

**One for ground** 

**One for Body Control Module** 

These are result of FIRE!

Short can take out Body Control Module.

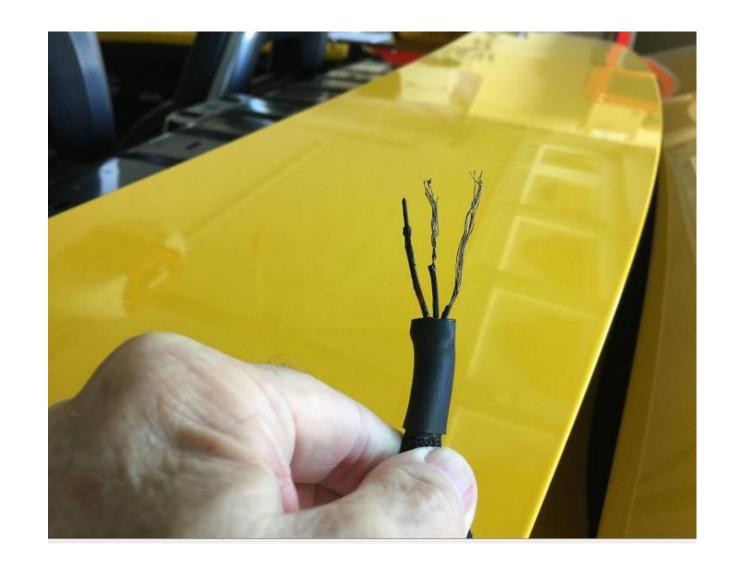

**ED** in FL & Dicktator

Outer cover for Passengers side fuse box.




**ED** in **FL** & Dicktator

Inside cover for passenger side fuse box.



**ED** in FL & Dicktator

Use Fuse Box cover to locate fuse #40.

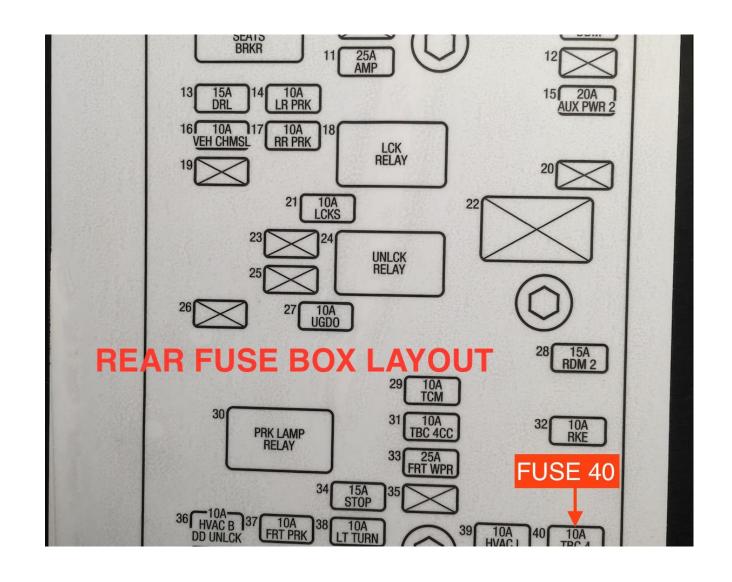


**ED** in **FL** & **Dicktator** 

Fuse Box behind passenger seat.

Remove covers to fuse box.

Locate fuse #40 Diagram on back of fuse box cover.

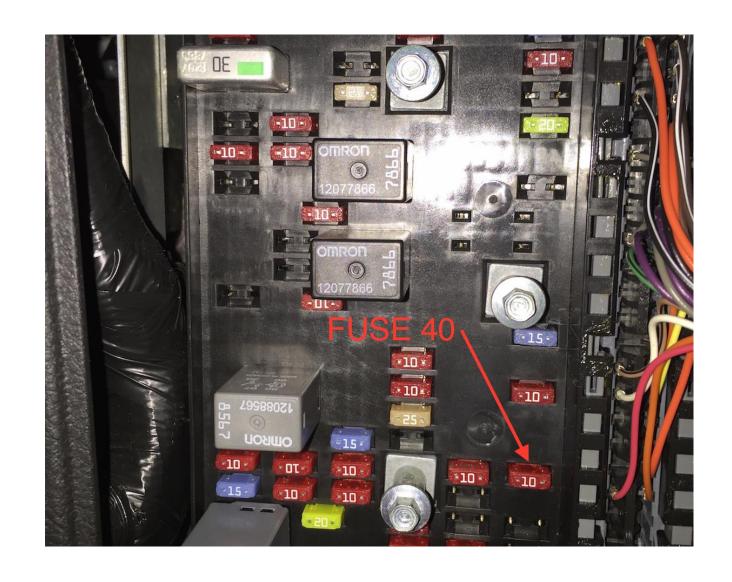

Remove OEM 10amp or 15amp fuse.



Replace with 1amp fuse or 2amp fuse.



Gentle "pry" open plastic lens from drivers side of SSR.



**Remove Bulb.** 

**VERY HOT!!** 



**Remove Bulb.** 


**VERY HOT!!** 



**Corrosion on Bulb.** 

May lead to overheating.

May cause PC board to overheat and short out.

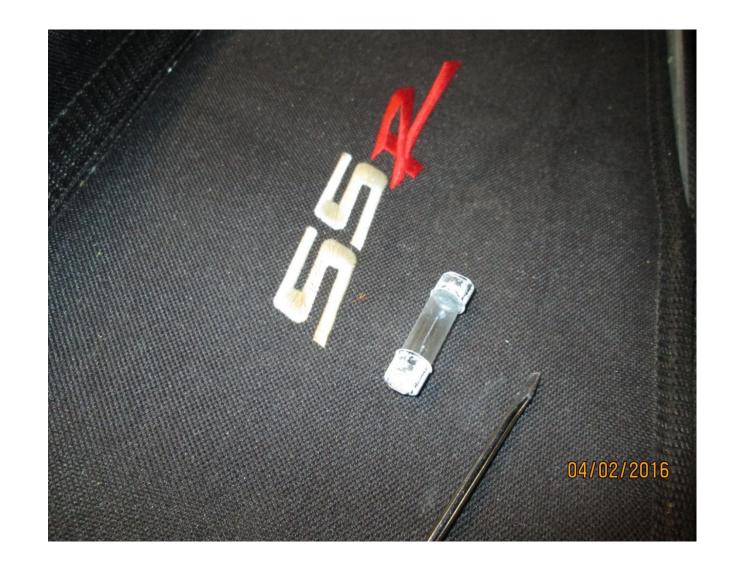

This is LED White replacement.


1/2 amp no heat!



**Another type LED light.** 

LED on panel, set on lens.

1/2 amp no heat.

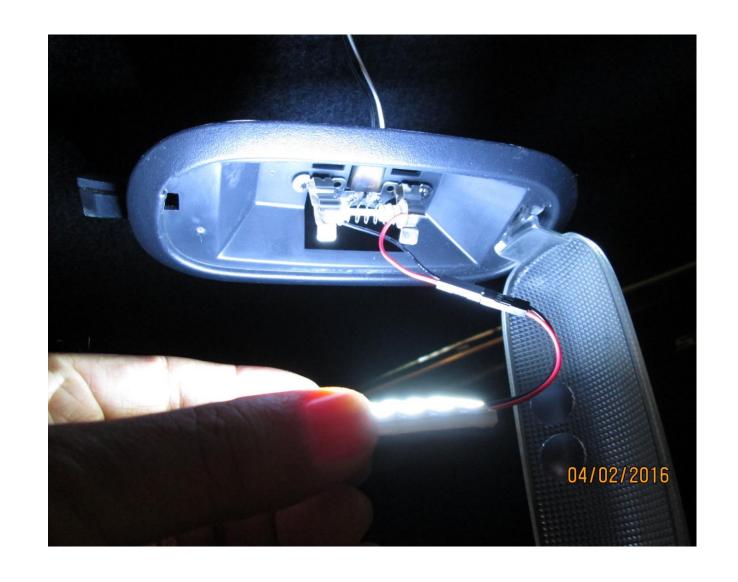

Brighter safer LED with low amp fuse.

